

CleanerPath

CleanSpace 1280 Operation Manual



Getting Started

Congratulations on your CleanSpace 1280! Here is what you'll need to do to get your machine up and running:


Step 1. You'll receive a base, tank, and spout. Just stack each piece. It's very easy to assemble out of the box!

Step 2. Remove the water tank cover and add in the recommended quantity of MB-10 tablets + water and wait 2 minutes for the disinfectant to dissolve. *use the CleanSpray bottle as a measuring device, 32oz bottle

Step 3. Place the base, tank, and spout together and plug it in.

Step 4. Press the power button on your remote and set the timer to match your room size.

Step 5. Leave room while CleanSpace is in use. The CleanSpace will auto shut off once the cycle has completed. We recommend an additional 20 minutes once finished to ensure the space is safe for re-entry.

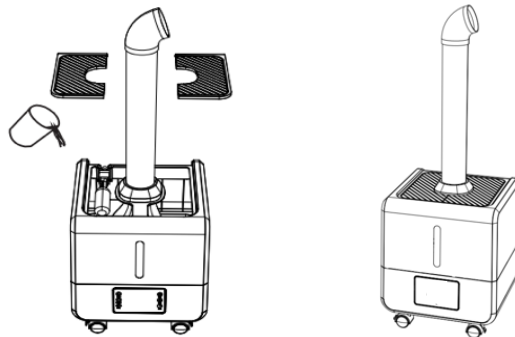

USAGE CHART

DISINFECTANT	WATER	COVERAGE	USES	TIME
1 6g MB-10 Tablet	64 ounces	640 SQFT	2	15 minutes
1 6g MB-10 Tablets	64 ounces	1280 SQFT	1	30 minutes

SAFETY INSTRUCTIONS

1. Do not repair or adjust the product base by yourself.
2. Do not add any kind of additive into the water tank that is not recommended.
3. Any change or refitting without our confirmation could be dangerous.
4. Immediately turn off the CleanSpace 1280 and unplug the power cord if there is an abnormal sound or smell. Contact our Service Department if you require a repair at info@cleanerpath.com.
5. Unplug the CleanSpace 1280 when moving or cleaning.
6. Unplug the CleanSpace 1280 when not in use.
7. Do not attempt to empty, fill or tilt the CleanSpace 1280 while it is in operation mode.
8. Please do not touch the water or the units in the flume when it is in operation mode.
9. Do not turn on the CleanSpace 1280 when there is no water.
10. Do not use the CleanSpace 1280 in a high humidity atmosphere, such as a shower room.
11. Do not scrape or scratch the atomization sheet with hard materials.
12. Do not let water run into the inside of the base.
13. Place the CleanSpace 1280 on a flat, smooth, level surface.
14. While in use, place the CleanSpace 1280 spout facing away from any direct contact with detectors.
15. The mist direction should not be aimed directly at walls, electric appliances, or furniture.
16. If possible and for maximum effect, cover the vent's and turn off your hvac system when decontaminating. Although this is not required to use the cleanspace units, it may provide better coverage. Need vent covers, they are cheap and magnetic, you can get a three pack on amazon for less the \$6.00, [click here](#) to order them, or just head to amazon and search for magnetic vent covers.

Daily maintenance

If the water quality being used is hard (with high content of calcium and magnesium), it is recommended to clean the CleanSpace 1280 daily to prolong the life of the machine and its effectiveness. When using the CleanSpace 1280, especially if you use water with natural minerals, there might be sediment build up on the atomization sheet. This will impact the efficiency of the CleanSpace 1280, and it is recommended to gently scrub off the build up.

How to Clean the CleanSpace 1280

Using distilled or purified water; recommend to wash ultrasonic atomizer, water tank, air net once a week. Frequently change the water in Atomizer Sterilization product to keep it clean. If it is not used for a long period, do not leave any water in the water tank. Please clean and wipe each part of the machine before storing.

How to clean the atomization sheet and base

Dilute 1:1 of water and white vinegar or citric acid and pour it into the base, adding hot water to dissolve detergent. Soak for 10 minutes and gently scrub the surface with small brush until scale is removed. Then clean the base and surface with water.

GENERAL TROUBLESHOOTING

Symptoms	Reason analysis	Solutions
No spray or mist	The plug is not connected properly	Insert the plug correctly
	The power is off	Turn on the power
	No water or little water in the tank	Fill tank with enough water
Low mist	Has scale on the surface of the atomization sheet or dirty water	Clean the atomization sheet and change the water.
Abnormal smell	New machine	Open the water tank and lay it open in a steady and cool place for 12 hours
	Water has not been clean or stored in the machine for a long time	Clean the tank and change with clean water
Abnormal sound	Water tank is put incorrectly	Adjust the water tank correctly
	Resonance caused by little water in the tank	Fill tank with enough water
Mist going around the spout	Resonance caused by unsteady surface	Put the appliance on a steady surface

Technical Parameters

Product name	CleanSpace 1280
Power	135 W
Mist	3000 mL/h
Capacity	4.2 gallons / 16L

Functions



Power: Plug in the power cable. Once plugged in, it is in standby mode and white lights will pop up on the screen.



Timer: Press this button to set timer from 0 to 95 minutes (5-minute increments).



3 Speed Mist Volume: Mist volume adjustment button can change the mist volume from high to low levels.



Sleep Mode: Hold button down for 3 seconds to enter sleep mode. The light on the screen will turn off, other functions will work as normal.




Ion: Ion mode is for cleaning the air, eliminating second hand smoke, and to prevent electrostatic.



Mist Interval: 1/3/5 minute intervals.



Humidity control: Set a value to keep your space at a certain humidity.

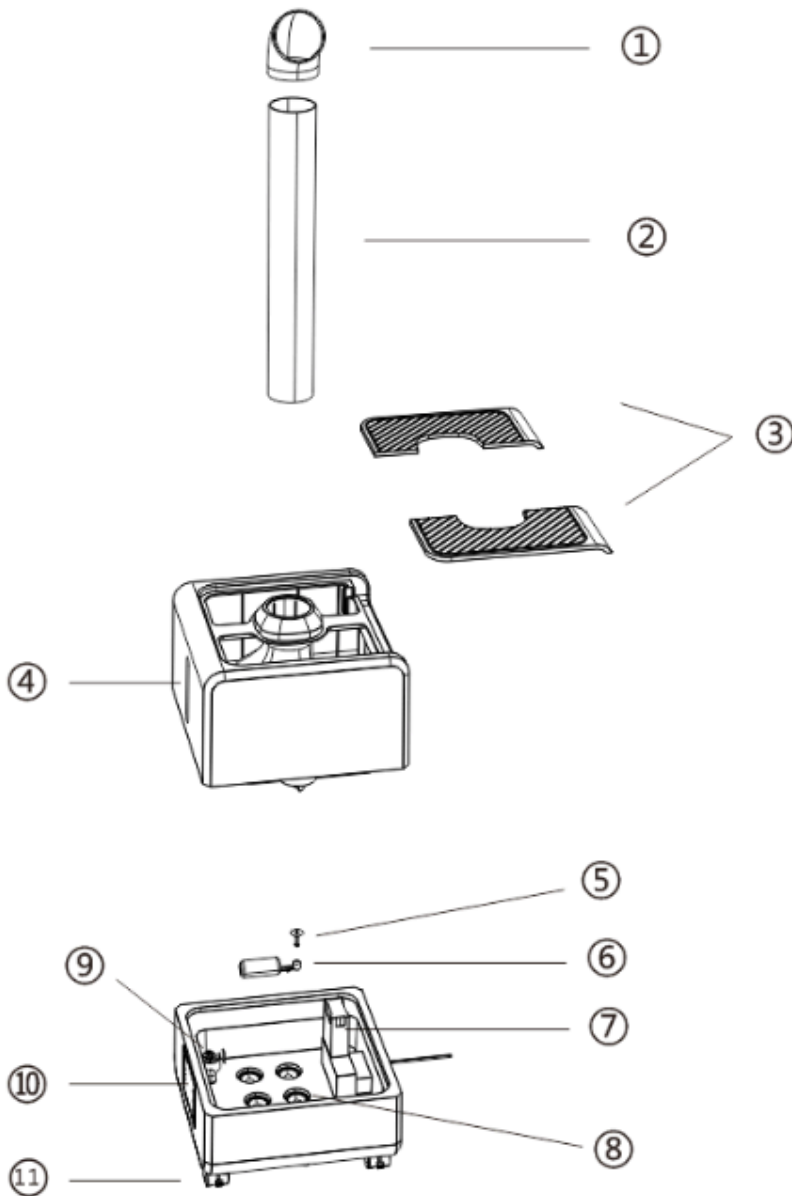

1. Directional Spout Piece

2. Main Spout

3. Water Tank Cover

4. Water Level Window

5. Piston

6. Floater

7. Air Flow Gap

8. Atomization Sheet

9. Water Level Sensor

10. Display Screen

11. Trundle with Wheels

Disclaimer of Liability

The material and information contained on this website is for general information purposes only. You should not rely upon the material or information on the website as a basis for making any business, legal or any other decisions.

While we endeavor to keep the information up to date and correct, CleanerPath makes no representations or warranties of any kind, express or implied about the completeness, accuracy, reliability, suitability or availability with respect to the website or the information, products, services or related graphics contained on the website for any purpose. Any reliance you place on such material is therefore strictly at your own risk.

CleanerPath will not be liable for any false, inaccurate, inappropriate or incomplete information presented on the website.

Although every effort is made to keep the website up and running smoothly, due to the nature of the Internet and the technology involved, CleanerPath takes no responsibility for and will not be liable for the website being temporarily unavailable due to technical issues (or otherwise) beyond its control or for any loss or damage suffered as a result of the use of or access to, or inability to use or access this website whatsoever.

Certain links in this website will lead to websites which are not under the control of CleanerPath. When you activate these you will leave the CleanerPath website. CleanerPath has no control over and accepts no liability in respect of materials, products or services available on any website which is not under the control of CleanerPath.

To the extent not prohibited by law, in no circumstances shall CleanerPath be liable to you or any other third parties for any loss or damage (including, without limitation, damage for loss of business or loss of profits) arising directly or indirectly from your use of or inability to use these products, this site or any of the material contained in it.

Blogs. Browse our community of bloggers but be aware that the opinions expressed by the bloggers and those providing comments are theirs alone, and do not reflect the opinions of CleanerPath. CleanerPath is not responsible for the accuracy of any of the information supplied by bloggers or in relation to any comments that are posted. You should bear in mind that circumstances change and that information that may have been accurate at the time of posting will not necessarily remain so.

Comments. CleanerPath will not tolerate defamatory material, obscene content and abusive or intimidating comments. CleanerPath may monitor comments on this website and may remove any material from the website at its sole discretion, without warning and without prejudice to any other accrued rights.

Liability is not limited by the above disclaimers in relation to death or personal injury arising from negligence on the part of CleanerPath. While precautions are taken to detect computer viruses and ensure security, CleanerPath cannot guarantee that the website is virus-free and secure. CleanerPath shall not be liable for any loss or damage which may occur as a result of any virus or breach of security.

While making every attempt to secure personal data, BCS cannot accept responsibility for any unauthorized access or loss of personal information that is beyond the control of the CleanerPath.